

- BRUCIATORI A GAS PROGRESSIVI
- PROGRESSIVE GAS BURNERS
- BRULEURS GAZ PROGRESSIVES
- QUEMADOR DE GAS PROGRESIVOS




BLU 3000.1 PR
BLU 4000.1 PR



LB1616
27.06.2006

Blu 3000.1- 4000.1 PR

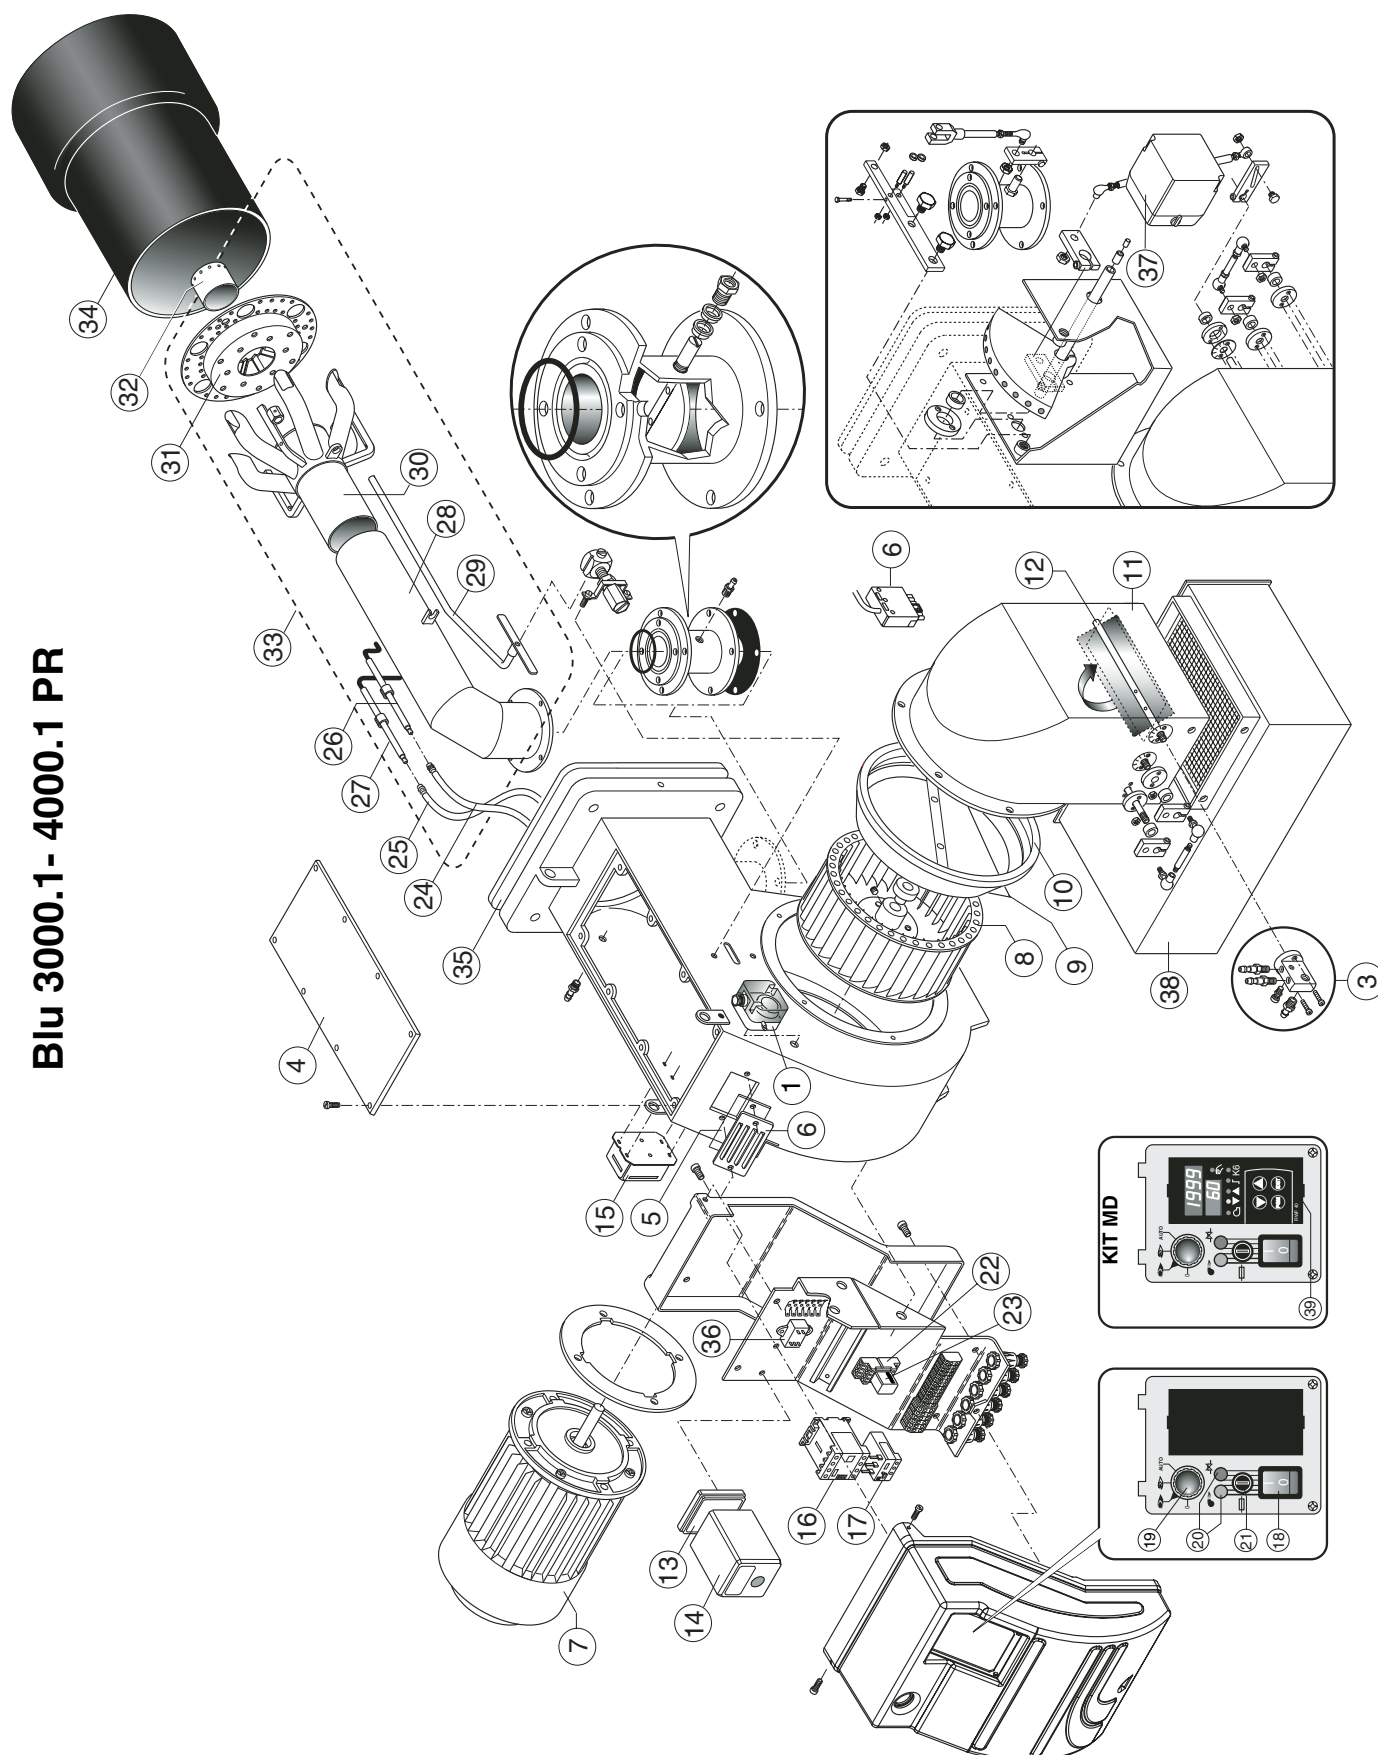

N°	DESCRIPTION	BLU 3000.1 PR/MD code	BLU 4000.1 PR/MD code
1	AIR PRESSURE SWITCH DUNGS LGW10 A2P	Q120	Q120
2	AIR INTAKE SET	GRPA100	GRPA100
3	PLUG WIELAND 6 pin	E226	E226
4	COVER	BFC09254/038	BFC09254/038
5	GLASS	BFC02004	BFC02004
6	PEED WINDOM FRAME	BFC02006	BFC02006
7	MOTOR 5500 W	M128/017	-
	7500 W	-	M129/017
8	FAN 320 X 150	BFV10304/001	BFV10304/001
9	FAN SCOOP	-	BFC08059/001
10	AIR CONVEYOR	BFC08254/001	BFC08256/001
11	AIR INTAKE	GRCA320	GRCA320
12	AIR INTAKE PIPE	BFS02208/201	BFS02208/201
13	CONTROL BOX BASE LANDIS	A401	A401
14	CONTROL BOX LANDIS LFL1.622	A113	A113
15	IGNITION TRANSFORMER COFI 820 PM	T106/4	T106/4
16	REMOTE CONTROL SWITCH BF25.00	R617	-
	BF40.00	-	R616
17	MOTOR THERMAL RELAY Lovato RF25 9-15 A	R513	-
	Lovato RF25 14-23 A	-	R513/1
18	MAIN SWITCH cod.40100I1509	R1020	R1020
19	MANUAL / AUTOMATIC SELECTOR	R1020/5	R1020/5
20	LAMP EL/N-SC4 Elettrospring	E1510	E1510
21	FUSE SUPPORT FUSIT FH-B528	E802/2	E802/2
22	RELAY BASE FINDER 5532	R905	R905
23	RELAY FINDER 5532	R711	R711
24	IGNITION CABLE		
25	IONIZATION CABLE	E1102/27	E1102/27
26	IGNITION ELECTRODE	BFE01057/1	BFE01057/1
27	IONIZATION PROBE	BFE01057/2	BFE01057/2
28	PIPE TC	BFT14015/101	BFT14015/101
	TL	BFT14015/201	BFT14015/201
29	ROD TC	BFA08020/101	BFA08020/101
	TL	BFA08020/201	BFA08020/201
30	FIRING HEAD	BFT14016/001	BFT14016/001
31	FRONT DISC	BFD03020	BFD03020
32	FRONT PIPE NATURAL GAS	BFT12113/2	BFT12113/3
	LPG	BFT12113/5	BFT12113/5
33	INNER ASSEMBLY TC		
	TL		
34	BLAST TUBE TC	BFB07023/103	BFB07026/103
	TL	BFB07023/203	BFB07026/203
35	GASKET	BFG04051/1	BFG04051/1
36	ANTI JAMMING FILTER	S132/4	S132/4
37	AIR DAMPER MOTOR SQM50.481A2	M212/91	M212/91
38	SILENCER	GRSIL04/01	GRSIL04/01
model MD			
39	MODULATING KIT LANDIS RWF 40	E2490/5514	E2490/5514

TC = SHORT HEAD TL = LONG HEAD